

A FIXED TORQUE DRIVER, OR ONE WITH A NARROWER ADJUSTMENT RANGE, IS MORE ACCURATE. PRO TIP

6. Remove and store LevelDrive® screw prior to shooting.

USE YOUR RIGHT HAND TO TIGHTEN AND LEFT HAND TO LOOSEN

7. Open clamp parallel to base by turning each ClickDrive® wheel only a few clicks at a time, in an alternating pattern.

