

Owner's Manual

Safariland™ User's Guide

Step 5

The tensioning device should be set so that any unnecessary movement in the muzzle area is eliminated. NOTE: Do not over tighten as this may affect smooth draw from the holster. Turn the tension adjustment screw clockwise to tighten or counter clockwise to relieve retention. Repeat the entire procedure until you are satisfied with the handgun's security and draw from the holster.

CAUTION: Practice and training as prescribed in this manual are mandatory prior to using the holster on duty. Do not use a loaded handgun during practice and training. Practice using the holster with an unloaded handgun until you are thoroughly competent and proficient in its safe use.

Regular practice to assure proficiency in using the holster must be continued as long as it is to be used. The amount of practice and training required will depend upon the dexterity, coordination and prior experience with holsters and handguns of each particular user.

Congratulations on your Safariland purchase. You have selected a product with construction technology that is unique and state of the art in the manufacturing of holsters, belts and accessories.

The product you have received is constructed with one or more of the following materials; a soft glove leather, natural suede and/or SafariLaminate™. Care and maintenance of this product is dictated by the material from which it is constructed. Use of an incorrect cleaning material will result in damage to the finish of the product.

SafariLaminate™ can be cleaned by wiping with a clean damp cloth. A paste type leather polish may be used to clean and protect the leather portions of the product. Products manufactured with suede can be cleaned by brushing with a soft brush. Do not use spray lacquer on any product as it will damage the finish.

It is important to note that most natural and man-made products may eventually "wear out" or become unsuitable for the function for which they were designed. Stress and strain placed on any given holster will vary according to usage; therefore it is difficult to indicate a recommended replacement date for this product. It is the user's responsibility to assure, after use, that the holster is able to continue service within its design parameters.

It is the user's responsibility to daily inspect the holster for signs of excessive wear, or loss of retention of the handgun, and tightness of all screws and hardware. If any possible problem is detected or any doubt exists, do not use. Call Safariland's Customer Care at (800) 347-1200 or (909) 923-7300.

Owner's Manual

Safariland™ User's Guide

EXPRESS LIMITED WARRANTY FOR HOLSTER AND ACCESSORY PRODUCTS

Safariland™ (the "Company") warrants its holster products to be free from defects in materials and workmanship for a period of two (2) years from date of purchase. This warranty is subject to the proper Care and Maintenance of the product and proper use of the product as detailed in the Consumer and Safety Information.

If you believe this product has any defects in materials or workmanship, cease use immediately and contact customer service for a remedy. If a product proves to be defective in material or workmanship, we will repair or replace the product and send it to you at the Company's expense. All returns must include the proof of purchase and documentation specifying the claimed defect.

This is a LIMITED WARRANTY, and is the sole and exclusive warranty of this product by the Company. It shall not be enlarged by any representations, descriptions, course of dealing, trade usage, rendering of technical advice, service or otherwise. Furthermore, it shall not be altered or expanded by any acts, statements, or agreements of any dealer, employee or agent of the Company (other than by a duly authorized officer of the Company).

THE COMPANY MAKES NO OTHER WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY.

IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY PUNITIVE, EXEMPLARY, OR CONSEQUENTIAL DAMAGES, ANTICIPATED OR LOST PROFITS, INCIDENTAL DAMAGES, LOSS OF TIME, OR OTHER INDIRECT LOSSES OR EXPENSES THAT ARISE FROM ANY CAUSE RELATING TO THE PRODUCT, REGARDLESS OF THE FORM OF THE ACTION, WHETHER IN TORT (INCLUDING NEGLIGENCE), CONTRACT, STRICT LIABILITY OR OTHERWISE, AND REGARDLESS OF WHETHER THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For any warranty issue, please contact customer care for a prompt resolution to your concern at the number provided below.

**THE SAFARILAND
GROUP**

3120 East Mission Boulevard
Ontario, California 91761 U.S.A.
Tel (909) 923-7300 Fax (909) 923-7400
© 2017 Safariland, LLC

Owner's Manual

Safariland™ User's Guide

6354RDS, 6355RDS, 6384RDS, 6385RDS



Read and understand entire manual before using holster.

Owner's Manual

WARNING

Read and understand entire manual before using holster.

Improper or careless use of a firearm or a firearm and holster may result in serious injury or death. It is the user's responsibility to have a thorough knowledge of and be properly trained in all aspects of firearm and holster safety and use.

- ❑ Do not place a loaded handgun in a holster without first testing the holster for proper fit with the handgun in an unloaded condition.
- ❑ Do not carry any handgun with a round in the chamber unless you have received professional training in use of the handgun and holster and are willing to assume responsibility and risk (including accidental discharge) of carrying a loaded handgun.
- ❑ If your handgun is equipped with a safety lever, be sure that safety is engaged when holstering the handgun.
- ❑ When drawing handgun from holster or replacing it in holster do not place finger in trigger guard, or near the trigger. Position trigger finger adjacent to but away from the trigger and, if possible, support tip of finger on the front of trigger guard.
- ❑ When putting handgun in holster always place thumb over the hammer or behind the slide.
- ❑ Always keep hammer strap and thumb break forward or clear of trigger guard when putting handgun in the holster. Do not allow strap or any other object to enter trigger guard.
- ❑ Always secure the retaining or safety strap(s) on holster after inserting handgun in holster.
- ❑ Never holster any semi-automatic handgun in a single-action mode (except handguns which are single action only; e.g.s., the Colt 1911 and the Browning Hi-Power style handgun).
- ❑ Do not attempt to cock a holstered handgun as this can cause severe damage to the handgun or holster or both and may contribute to an accidental discharge.
- ❑ Always place hand on the handgun and holster when running or performing other vigorous activity.
- ❑ Do not use customized, modified, worn or broken handguns or those that are not of original manufacturer's specifications in a Safariland holster.
- ❑ Do not, in any way, modify, disassemble or remove any part from this holster.
- ❑ Do not expose holster to extreme heat conditions.
- ❑ Do not leave holster in trunk of vehicle during extremely hot weather.

Owner's Manual

Safariland™ User's Guide

- ❑ Do not rely on any holster being "snatch proof". There is no such holster. Rely only on extensive, proper training and vigilance.
- ❑ It is the user's responsibility to properly maintain holster checking snaps, screws and other components for proper function.

Failure to heed these warnings or follow the operating instructions may result in accidental discharge of a handgun causing serious injury or death.

Read and understand all owners manuals, instructions, and guides prepared by the manufacturer for your handgun.

Safariland holsters are designed to carry specific handguns. Before use, be sure holster selected is designed to carry corresponding handgun. If there is any doubt, do not use holster. Contact Safariland's Customer Care at (800) 347-1200 or (909) 923-7300. Carrying a handgun in an ill-fitting or improper holster can result in serious injury or death.

The purchase and use of this Safariland holster is done at the sole and exclusive risk of the user.



Operating Instructions

Step 1

The Safariland RDS Models 6354, 6355, 6384 and 6385 holster must be installed on a belt. Slide the belt through the upper belt loop portion of the holster. Next, place the leg strap around the upper portion of the thigh and adjust, making certain that the holster is secure but not too tight. (See illustration)

Note-The RDS 6355 and 6385 has a detachable harness.

Step 2

Remove the Velcro lock strap mounted to the vertical leg strap. The vertical leg strap incorporates hook and loop on the inside of the nylon. Adjust the position of the position of the holster to the leg by releasing the hook and loop and moving the strap up or down until the fit is comfortable. We recommend that you wear the holster as high as possible, but yet still comfortable on the leg. Reinstall the hook and loop lock strap in the same manner as it was before it was removed. Position the lock strap just below the belt. This will help keep the leg strap secure during movement. Place a keeper on the belt in front of and just behind the vertical leg strap. This will help keep the holster from rotating on your leg.

Step 3

Insert unloaded handgun straight down. When placing handgun in the holster, do not place finger in trigger guard, or near the trigger. Position trigger finger adjacent to but away from the trigger and, if possible, support tip of finger on the front of trigger guard. While inserting handgun in the holster, always place thumb over the hammer or behind the slide. Be certain handgun is thoroughly seated in holster with ejection port lock engaged.

CAUTION: This holster is designed to accommodate a handgun with an approved light system mounted to it. The holster retention system is designed to function optimally with the light installed on the handgun. To ensure proper functioning of the holster retention system, ensure that the approved light is installed on the handgun in accordance to the manufacturer's recommendations.

Step 4

To draw handgun, use thumb to move ejection port locking lever back enough for weapon to clear and draw handgun straight up. Caution: A bit of resistance should be encountered until handgun is released from holster seat.

CAUTION: Prior to wearing the holster on duty, the user must accomplish draw from fully secured holster in less than two seconds while under simulated stress or a life-threatening situation. Have a partner time your surprise command to completed draw.

A handgun seated in a new holster will fit more tightly than after a reasonable, break-in period has occurred. Thus, the holster should not be used with a loaded handgun or on duty until the under two-second drawing standard indicated above is accomplished by the user. Should the holster remain tight after a reasonable break-in period, apply a liberal amount of common silicone spray to the inside of the holster.