## SCALARWORKS®

## FUSE/02 OWNER'S MANUAL




01 the scope can be rotated in the rings.

Fasten screws only on the "NO GAP" side so that



02. times as needed until torque stabilizes at 20inch-lbs.


Tighten each screw in the pattern shown, as many

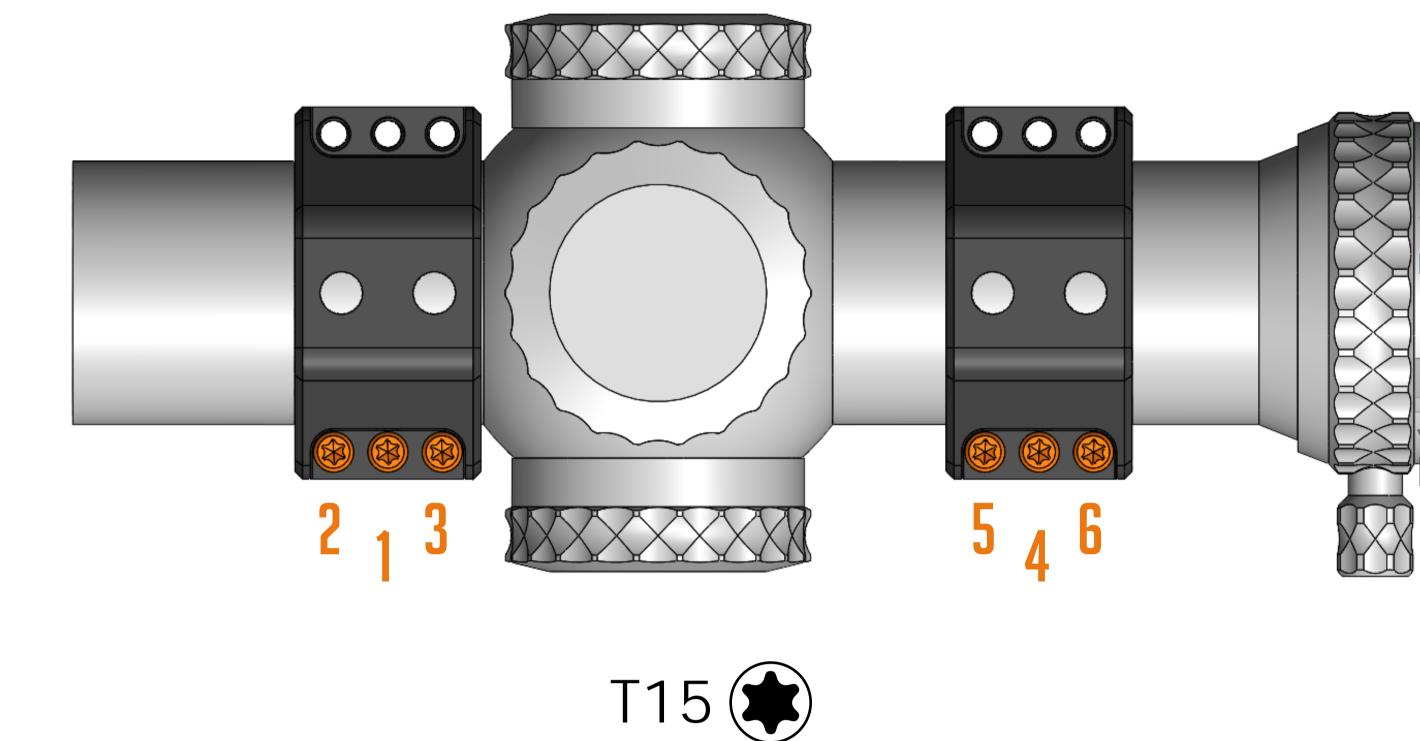

03.


Rotate scope while turning in LevelDrive. Repeat

until no gap is visible between LevelDrive & Scope.

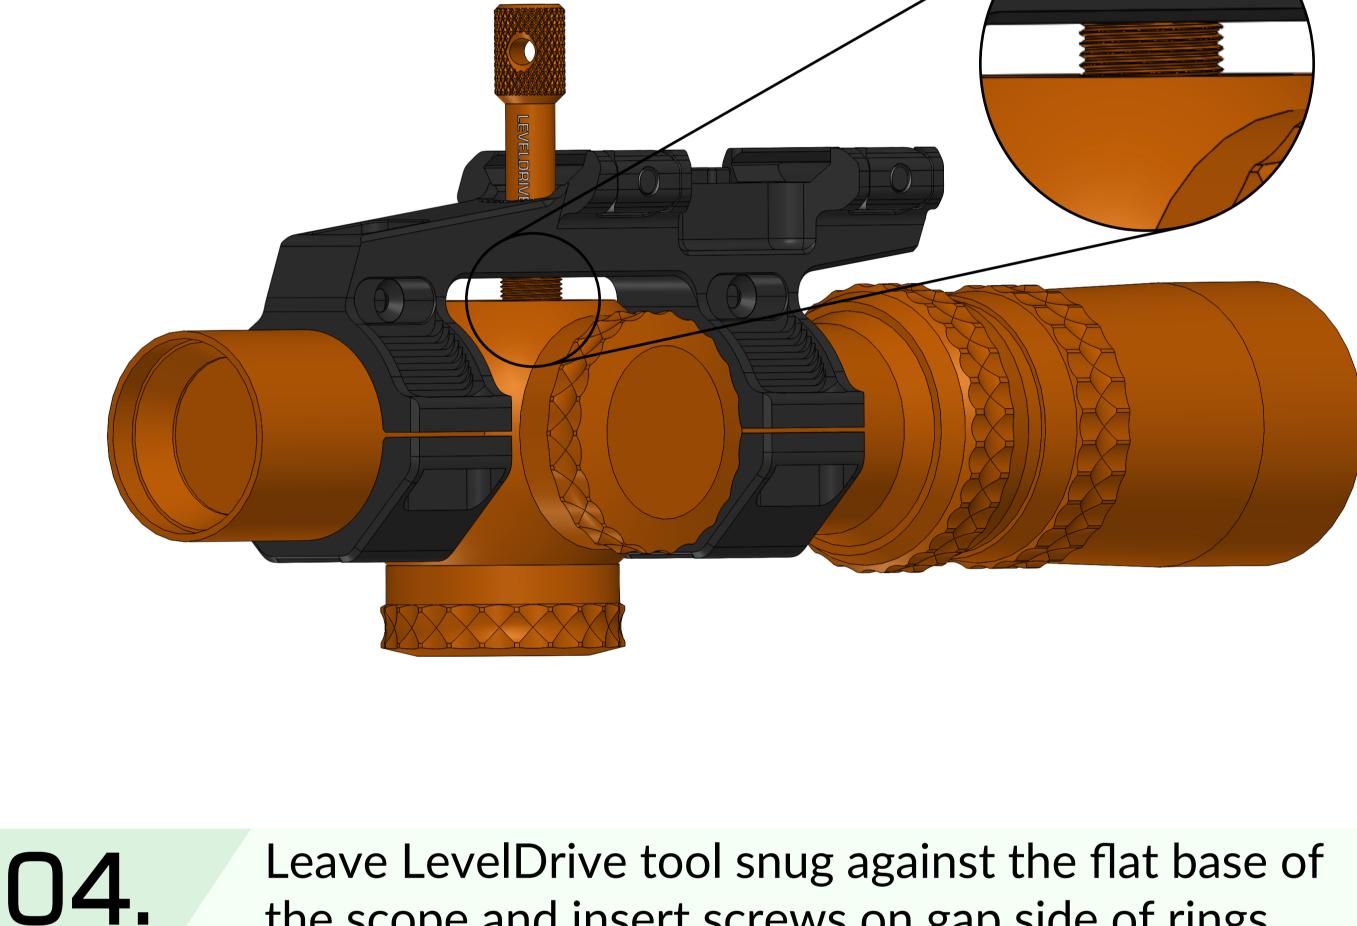

the scope and insert screws on gap side of rings.



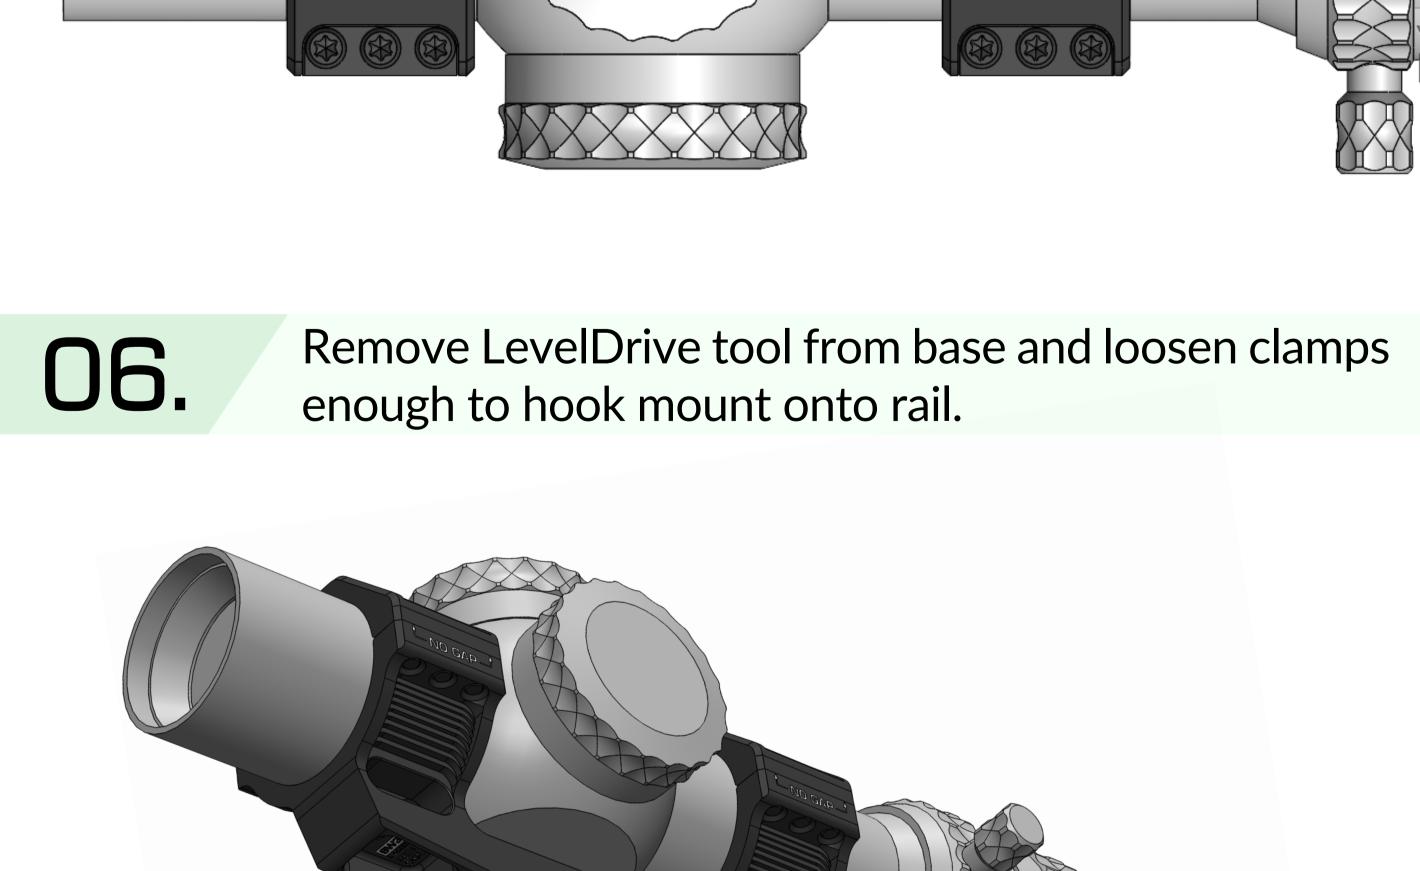

UNLOAD & MAKE WEAPON SAFE

Hook mount onto rail and push forward to seat

07. against rail slot. Tighten cross-bolts to 50inch-lbs.

