



⚠ UNLOAD & MAKE WEAPON SAFE ⚠

1. Insert screws while applying minimal pressure to avoid cross-threading.
2. Progressively tighten screws, while firmly pressing driver bit into the T10 socket to avoid slippage.

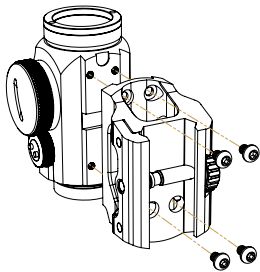

MAX TORQUE 10 INCH-LBS

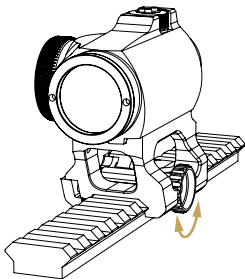

3. Open clamp no further than internal stops allow.
4. Hook Leap mount onto rail from ClickDrive side.
5. Close clamp by turning ClickDrive wheel as tightly as you can by hand (Do not use tools).

PRO TIP USE YOUR RIGHT HAND TO TIGHTEN AND LEFT HAND TO LOOSEN