

### ADMINISTRATIVE MODE

#### Reticle Selection


Press **+** & **-** Hold 3 seconds

**\*** Rapid blink

Press **±** to select reticle

To return to OPERATIONAL MODE,  
leave alone for 10 seconds

- OR - Press **±** Hold for 3 seconds

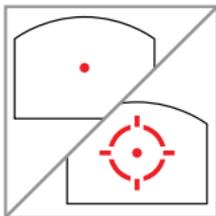

Select between a dot only or  
reticle with center dot

### OPERATIONAL MODE

#### Turn On Unit

Press **±**

#### Turn Off Unit

Press **+** & **-**  
Hold 6 seconds and release

#### Auto Brightness Adjustment Mode

Press **+** & **-**  
Hold 1 second and release

#### Manual Brightness Adjustment Mode

Press **±**  
Press **+** to increase brightness  
or **-** to decrease brightness

#### Button “Lock-out” Mode

Allows the user to lock out  
the buttons in Auto Mode and  
Manual Mode

Turn off unit

Press **+** & **-**  
Hold 3 seconds and release

To cancel, turn unit off and  
then back on

#### Manual Brightness “Lock-in” Mode

Allows operator to lock in a  
specific brightness setting

Set Brightness

Press **±** Hold 3 seconds  
and **\*** then release

To cancel, press **+** & **-**  
for 1 second

Scan the QR code  
to watch  
instructional  
videos




#### Factory Default Settings

Press **+** & **-** Hold 20 seconds and **\*** then release

### SYMBOL KEY

- +** Positive Button
- ±** Select Either Positive or Negative Button
- \*** Center Dot Reticle Blinking
- Negative Button
- ⊕** Complex Reticle Blinking

### ADMINISTRATIVE MODE

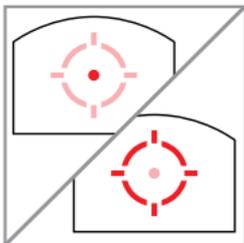

#### Reticle Relative Brightness

Adjust the contrast between dot and circle

Press **+** & **-** Hold 3 seconds

\* Rapid blink ⇨ **+** & **-**  
Hold 3 seconds

\* Slow blink ⇨ **+** & **-**  
Hold 3 seconds

☒ Reticle blink ⇨  
**+** Reticle Brighter **-** Dot Brighter

To return to OPERATIONAL MODE,  
leave alone for 10 seconds  
- OR - Press **±** Hold for 3 seconds



#### Brightness Response

Choose amongst Normal Auto (default), High Auto, and Low Auto adjust settings

Press **+** & **-** Hold 3 Seconds

\* Rapid blink ⇨ **+** & **-**  
Hold 3 Seconds

\* Slow blink ⇨ **+** High **-** Low

To return to OPERATIONAL MODE,  
leave alone for 10 seconds  
- OR - Press **±** Hold for 3 seconds

### SYMBOL KEY

**+** Positive Button

**-** Negative Button

**±** Select Either Positive  
or Negative Button

\* Center Dot Reticle Blinking

☒ Complex Reticle Blinking